

We thank you and congratulate you for choosing BOS products, designed and developed by enthusiasts, and handmade with care in France.

Please refer to the user manual available in the download section at www.bosmtb.com. It contains the important safety, maintenance, and warranty information you will need in order to safely install and use your BOS suspension as well as detailed set-up, tuning, and service information.

Good knowledge of your BOS product will make its day to day usage more enjoyable.

Coil spring

The spring rate depends on your body weight and the frame suspension geometry. Refer to the «Chart list» available in the download area at www.bosmtb.com for details.

Spring preload

The SAG should be set to 30 – 40% of the shock stroke. The preload must not exceed 4mm. If you have to preload more than 4mm change the coil spring for a stronger rate.

Length X Stroke (mm)	222x67			240x75			267x89		
SAG (%)	30	35	40	30	35	40	30	35	40
SAG (mm)	155	144	133	168	156	144	187	173	160

Starting point adjustments: To start your adjustment, turn the knob clockwise until it stops (=clic 0). Then, clicks are counted turning the knob in the counterclockwise direction.

- Low speed compression (A): 12 clicks
- High speed compression (B): 15 clicks
- Rebound (C): 10 clicks

